


\RESETSTACK0

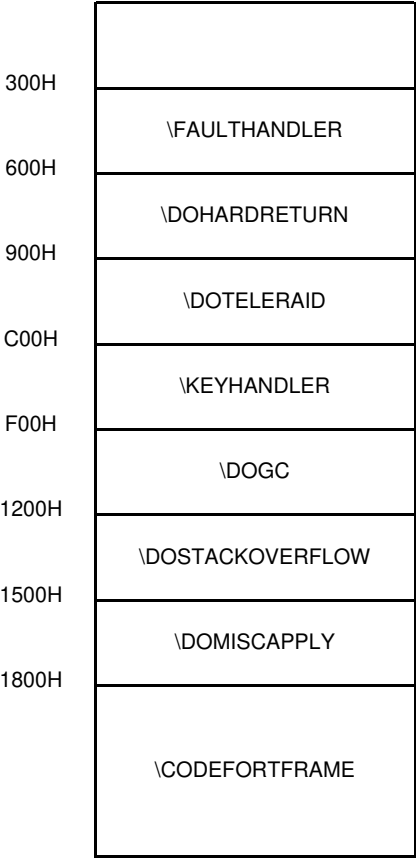

\InterfacePage.StackBase

\InterfacePage.EndOfStack

- \InterfacePage.FAULTFXP =302H
- \InterfacePage.HardReturnFXP =602H
- \InterfacePage.TELERAIDFXP =902H
- \InterfacePage.KbdFXP =C02H
- \InterfacePage.GCFXP =F02H
- \InterfacePage.SubovFXP =1202H
- \InterfacePage.MiscFXP =1502H
- \InterfacePage.ResetFXP =1802H